



HOLZKERN


SKYLINE  
42 MM

Minute | Minute

Hour | Stunde


Second | Sekunde

 **Instructions | Anleitung**  
[www.holzkern.com/FAQ](http://www.holzkern.com/FAQ)

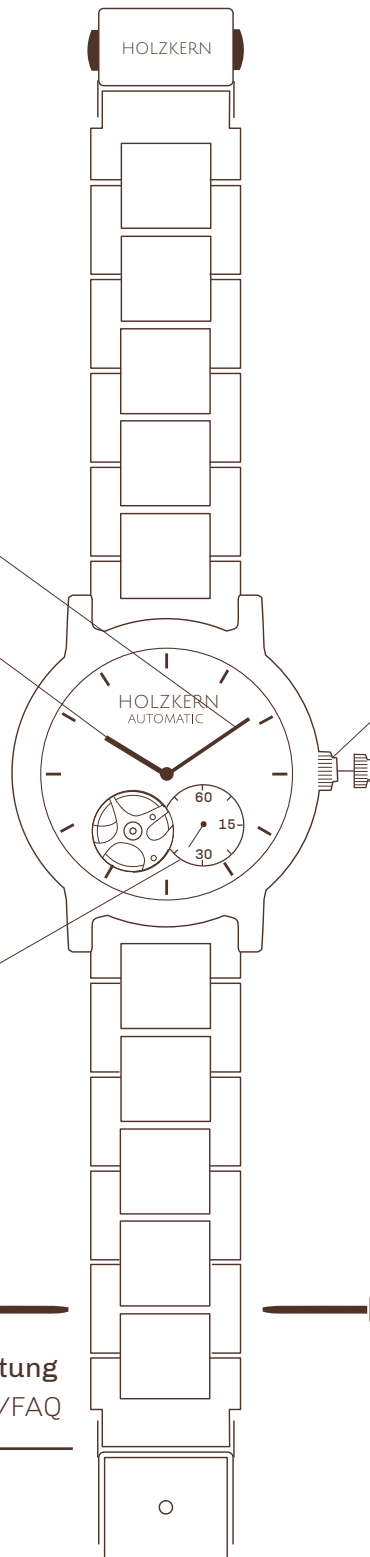

*Normal position*  
Normalposition

*1st click: time setting*  
1 Pos.: Zeiteinstellung



### **Winding the watch**

Wind the movement by turning the crown clockwise 40 times prior to wearing it. The movement will also wind automatically through regular use; however, after many hours with-out being worn it may be necessary to wind the movement again.

### **Uhr aufziehen**

Drehe die Krone 40 Mal im Uhrzeigersinn, bevor du deine Uhr zum ersten Mal anlegst und sie beginnt zu ticken.

Das Uhrwerk zieht sich nun durch deine Bewegung selbstständig auf. Sollte die Uhr mehr als 40 Stunden nicht getragen werden, wiederhole den Vorgang.

### **Movement | Uhrwerk**

Automatic | Automatik  
Citizen-Miyota 82S5

### **Case thickness | Gehäusehöhe**

13 mm

### **Circumference | Umfang**

Adjustable length | Größenverstellbar

### **Weight | Gewicht**

145 g

### **Glass | Glas**

Sapphire Crystal | Saphinglas

### **Backplate | Rückseite Gehäuse**

Metal, glass | Metall, Glas

### **Water resistance | Wasserdicht**

Splash-proof | Spritzwasserfest

### **Band width | Armbandbreite**

22 mm

### **Band | Armband**

Wood, metal | Holz, Metall  
Screws | Schrauben



**Accuracy / Day**    ±20-40 sec.  
**Genauigkeit / Tag**    ±20-40 Sek.



**Running time**    42 Hours  
**Laufzeit**    42 Stunden